



RECEIVER PROGRAMMING INTERFACE

With the unit on, press and hold the POWER ON button for 4 seconds. Once released "Pro" will be displayed at the top of the LCD. 

To scroll through the main menu headings, press the FREQUENCY. 

To enter a selection's sub-menu press the UP ARROW (GAIN UP) key. 

To browse a selection's menu, press the FREQUENCY. 

In the sub-menu, once the desired option is selected, exiting the sub-menu after toggling to the desired setting, will save the selection. To select a desired mode or frequency hold the FREQUENCY/MODE KEY for 2 seconds to select the desired option. 

To exit a selection's sub-menu use the DOWN ARROW (GAIN DOWN) button. 

Once in the main menu, exit the programming by pressing the POWER ON button. This returns to the normal operation mode. 




PROGRAM MENU ITEMS

<i>Vol</i>	Select volume setting; low, medium high & mute
<i>Light</i>	Turn on or off backlight
<i>Units</i>	Select metric or imperial measurement
<i>Orient</i>	Turn on or off line orientation indication
<i>Current</i>	Turn on or off constant current measurement
<i>Vibration</i>	Turn on or off haptic feedback
<i>PathLink</i>	Turn on or off PathLINK transmitter radio link
<i>batt</i>	Select battery profile; li-ion or alkaline
<i>OPMode</i>	Select locate modes for use during normal operation; Peak, pinpoint peak, null, & sonde
<i>Sonde</i>	Select available sonde frequencies for use during normal operation
<i>Line</i>	Select available line locate frequencies for use during normal operation

 
TRANSMITTER PROGRAMMING INTERFACE

With the unit off, press and hold depressed the POWER ON BUTTON. 

Pressing the FREQUENCY BUTTON will toggle through available configurations. Repeat pressing until 'US' is displayed in the FREQUENCY INDICATOR section of the LCD. 

Release the POWER ON BUTTON. 'PRO' will be displayed on the LCD.

Press the FREQUENCY BUTTON to toggle through the available frequencies. 

To select and store the desired frequency press and hold the FREQUENCY BUTTON for 2 seconds. The count of the selected frequency will be displayed on the LCD. 

Continue to toggle through and select the desired frequencies. 

Press the POWER ON BUTTON to shut the unit off. This will save the selected frequencies for availability during normal operation. 

